



Products/Parts List

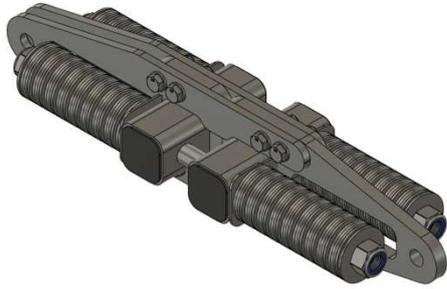

Quake Defender® devices

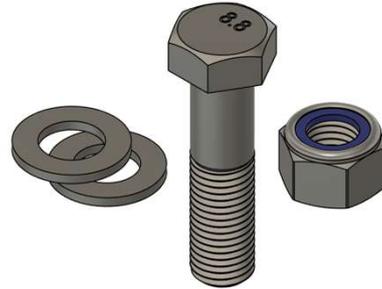

Cleat fasteners*

*Cleat fasteners includes 2x flat washers, 1x bolt, and 1x Nyloc® nut per Quake Defender device. For metric sizing of Cleat fasteners, see Device Parameters below.

Recommended Tooling/Tools List



Impact driver



Compatible socket




Adjustable wrench


Device Parameters

	Device C-C Length (L')(mm)	Overall Dimensions (LxWxH)(mm)	Device Weight (kg)	Cleat Fasteners Size	Cleat Bolt Length (mm)
QD35	450	500x170x140	15.8	M16/M20	60mm
QD65	599	649x170x140	29.3	M16/M20	60mm
QD105	609	673x170x140	31.5	M20	60mm
QD155	735	815x178x140	43.0	M24	90mm
QD255	703	876x178x283	79.2	M30	110mm


1. Remove the Quake Defender® device length (L') from the existing bracing to allow space for the device. Remediate cut in accordance with bracing supplier's recommendation.

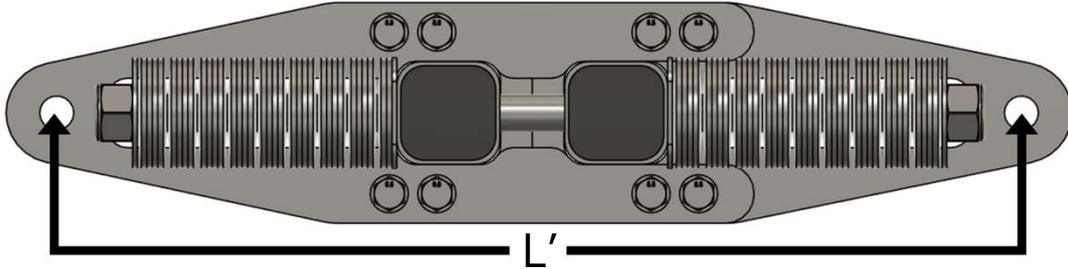

2. Fasten Quake Defender® to the cleat with the designated bolt and nut.

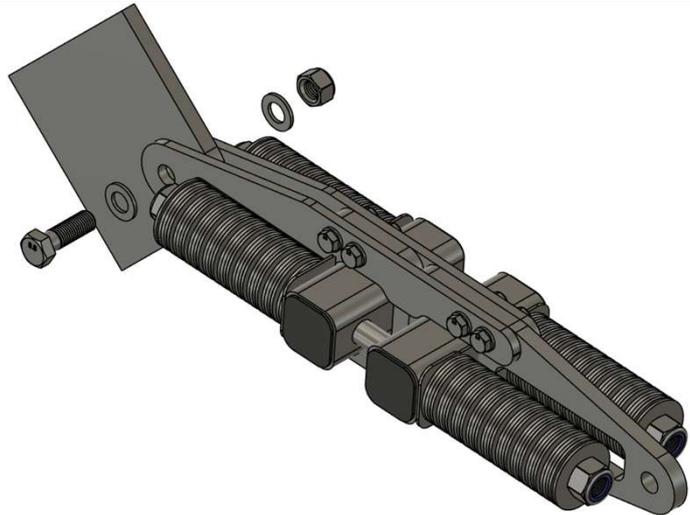

3. Attach bracing to the opposite end of Quake Defender®.

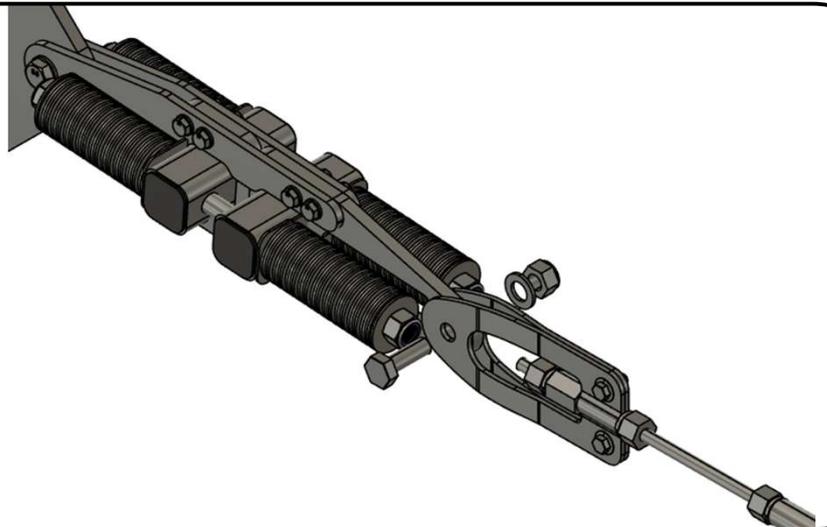

4. Continue with bracing set up as per supplier's installation guide.